

Written By: Nicholas Hardy



INTRODUCTION


Batteries wear out over time and should be replaced if battery life becomes excessively short. Before removing this battery, be sure that the computer is turned off and unplugged.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery

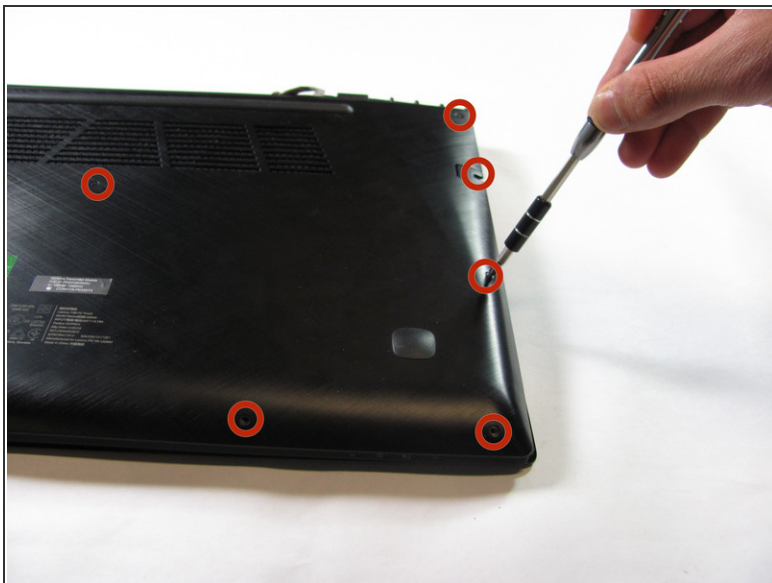


- Remove all twelve 6 mm long screws on the back of the laptop with a Phillips #1 screwdriver.
 - ⓘ Apply a lot of pressure to prevent the screws from stripping.
 - ⚠ Make sure to turn off the computer first!

Step 2




- Gently pull off the back cover of the laptop. It should come off easily.

Step 3

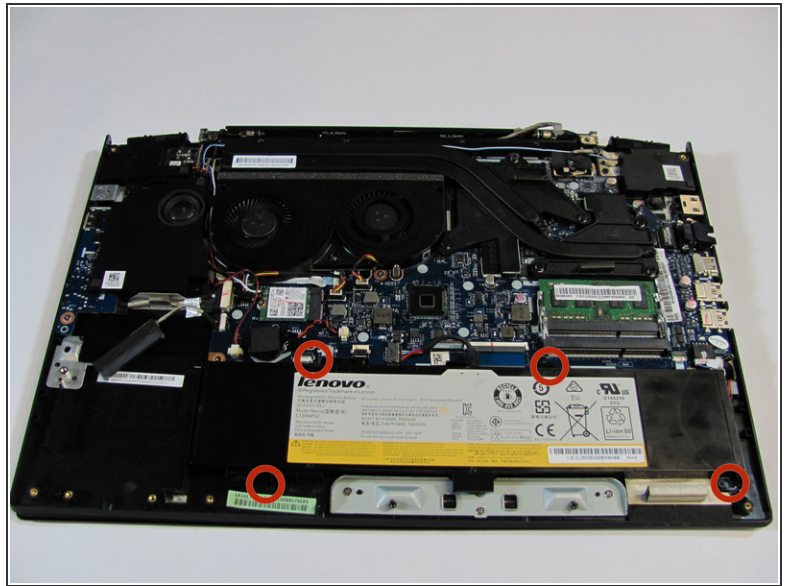

- Remove all four 6 mm screws from the battery using the Phillips #1 screwdriver.



Step 4

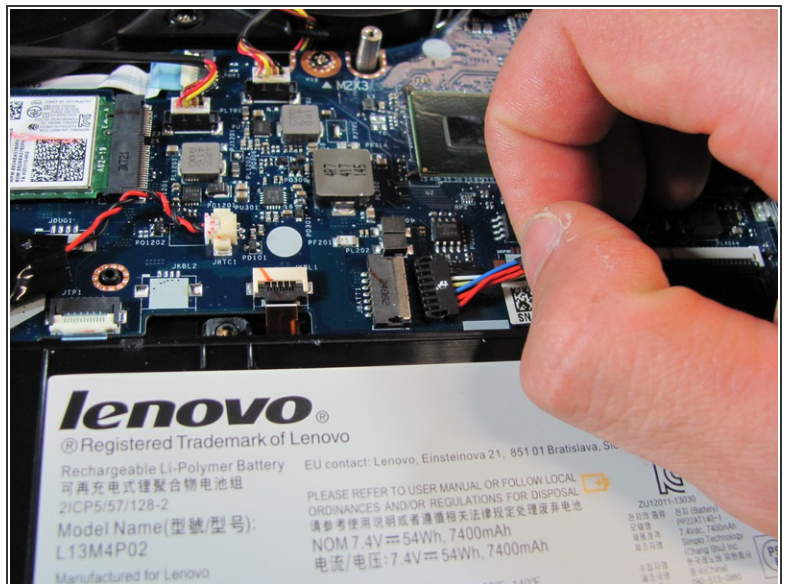

- Unplug the battery from the computer.

⚠ Do not pull too hard on the battery cable, as this can damage the battery's connection to the laptop.

Step 5

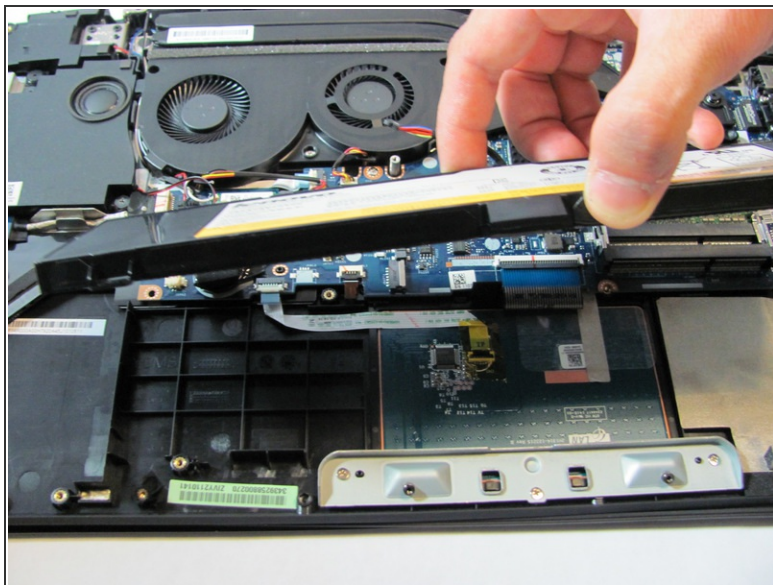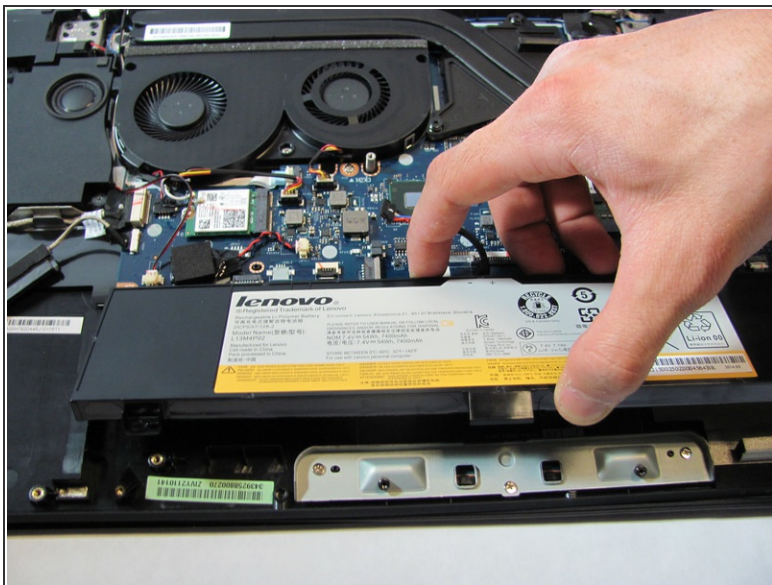

- Lift the battery out of the computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:54:00 PM.